


# DIY INVISIBLE BEAD CONNECTION WITH WIRE



## Materials:

- 1x Wire, silver gold plated, 0.3 mm (21264-0.3mm)
- 2x Cable chain, gold-plated silver, flat wire 0.3x0.2 mm, link width 1.5 mm (3560fgss-AR30fac)
- 1x Freshwater pearl (10105-4x3mm-str)
- 2x Chain-nose pliers (31105E)
- 1x Side-cutter pliers (31105F)

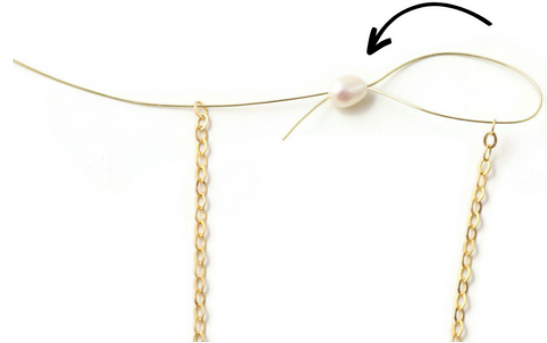

Start by threading the bead onto the wire and place the two cable chains on either side of the bead.

Guide one end of the wire through the bead once more to form an arc with the wire



Do the same on the opposite side of the bead so the ends are on opposite sides. If necessary, use a chain-nose pliers to guide the thread through the bead.

Carefully tighten the wire to close the curves. Do this with two chain-nose pliers



Cut off the end pieces with a side-cutter pliers.

The bead is now clamped between the two pieces of chain.